


# JB4 Connect Kit Install Guide (1-5-19)

## All Engine Types Except: N54

1) Insert the Connect Kit's blue wire through the rubber grommet at the JB4's harness.

2) Install the Posi-Tap as shown to the right. You can install the Posi-Tap on either red wire at the DB25 connector.

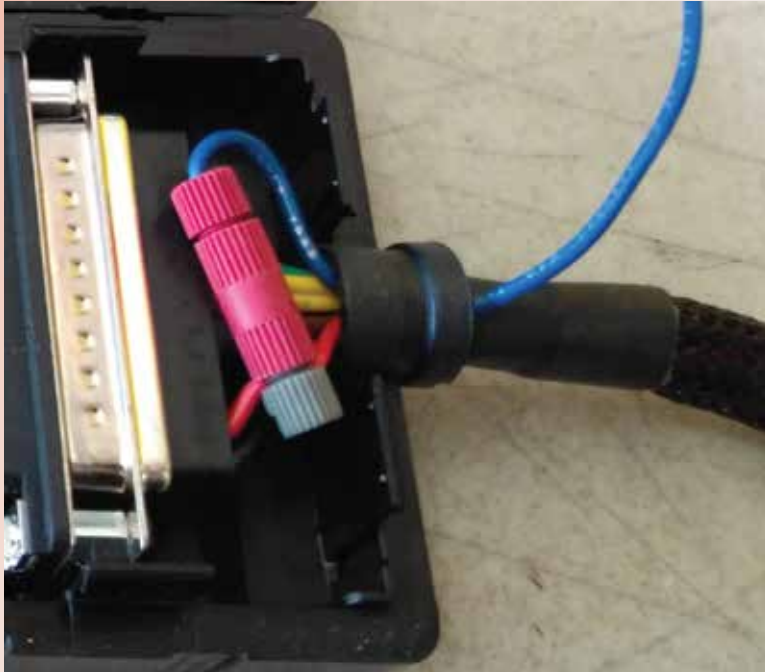


3) Install the DB9 connector and ensure both screws are secure.



# JB4 Connect Kit Install Guide (1-5-19)

## All Engine Types Except: N54

4) Put the JB4's enclosure back together.

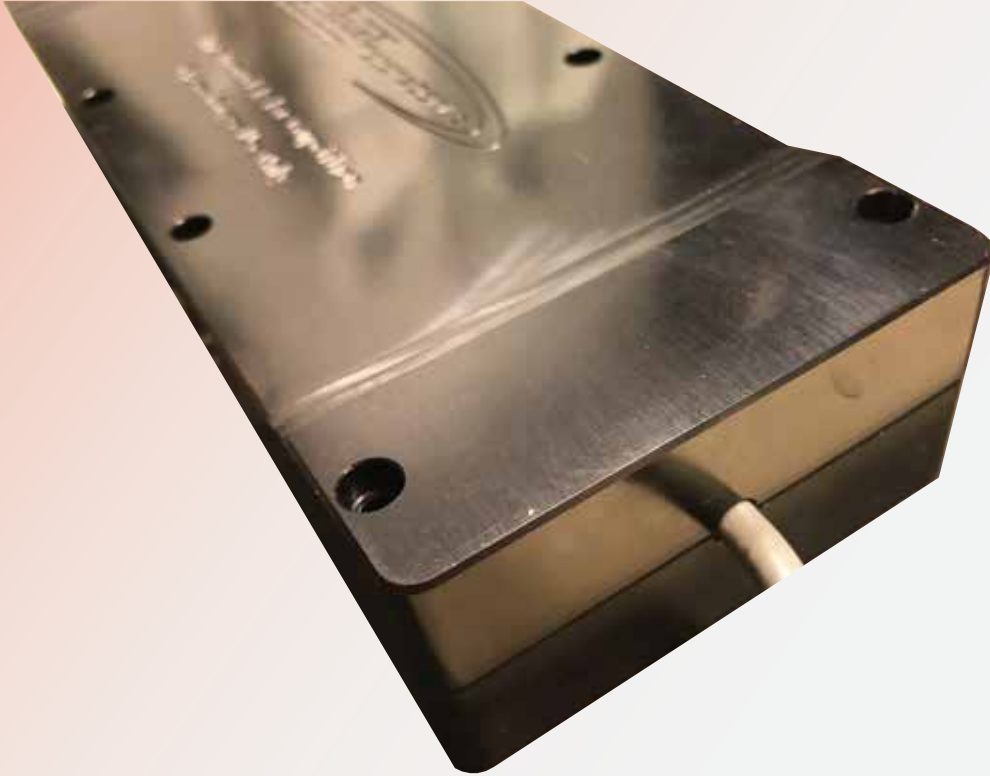

5) Ensure the Connect Kit isn't in direct contact with the metal JB4 enclosure or any other nearby metal. Aim the smaller side of the Connect Kit (circled below) towards the driver's seat for best signal quality.

